

## INSTALLATION INSTRUCTIONS


Inline shallow trap bath pop up waste single ended - **20004011450**

Inline shallow trap bath pop up waste double ended - **20004011460**


### Important

- We recommend that this product is installed by a qualified professional contractor. Such as a plumber who is certified by NVQ (National Vocational Qualification) or SNVQ (Scottish National Vocational Qualification) Level 3.
- Please check this product immediately to ensure that it has not been damaged and is complete. Before installation, please make sure this product is the correct model and you have all the parts required for installation and using.
- Please read these instructions carefully and keep it for future reference.

### Dimensions

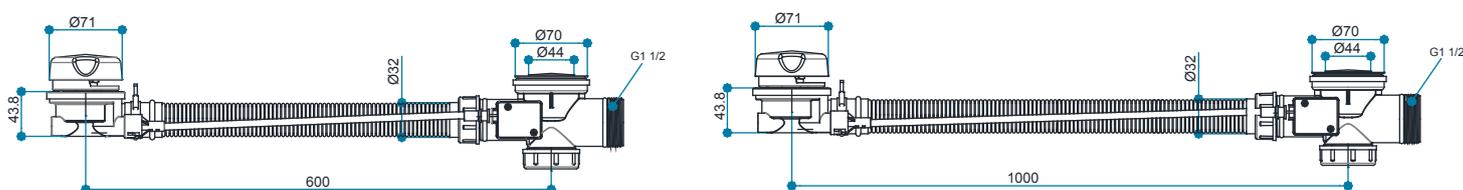

### Installation

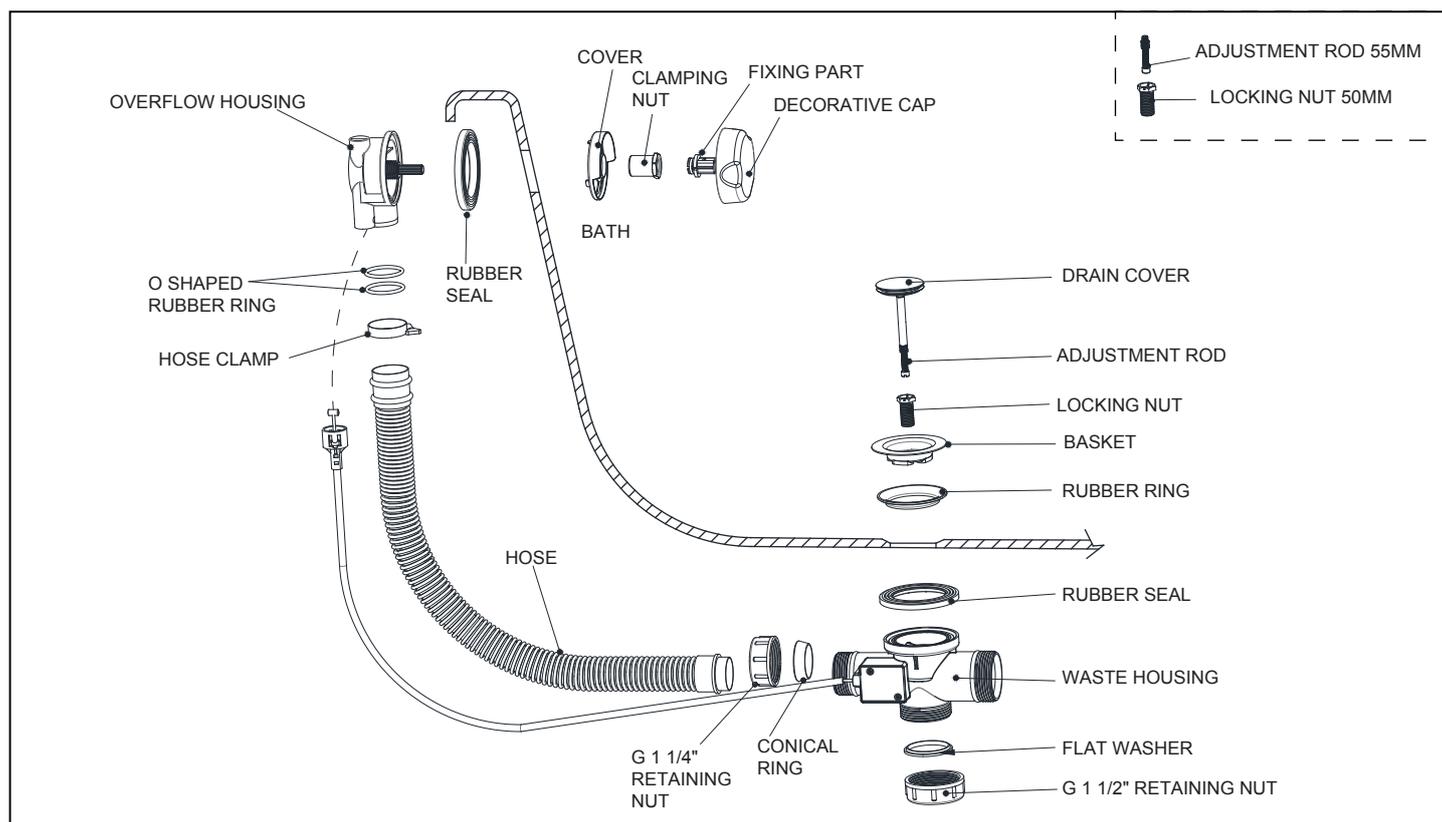

### Installation

1. Fit the rubber seal into overflow housing, then hold this unit in position from the backside of the bath.
2. From inside of bath, place the cover and screw on the fixing nut.
3. Push the cover on the spline of housing.
4. Place the rubber washer and waste housing onto the waste from the backside of bath in sequence.
5. Put the rubber ring and basket onto the waste. Screw in the locking nut. (depending on the thickness of the bath, two locking nuts of different lengths are provided.)
6. Drop in the pop up waste cover. (depending on the thickness of the bath, two rods of different lengths are provided.)

### Maintenance

Clean with warm soapy water or a mild detergent. Do not use abrasive or chemical cleaners as these can damage the surfaces and material. Please see our website [www.bathstore.com](http://www.bathstore.com) for any assistance.