

## INSTALLATION INSTRUCTIONS


Bath click clack waste chr for single ended bath - **20004011260**

Bath click clack waste chr for double ended bath - **20004011270**


### Important

- We recommend that this product is installed by a qualified professional contractor. Such as a plumber who is certified by NVQ (National Vocational Qualification) or SNVQ (Scottish National Vocational Qualification) Level 3.
- Please check this product immediately to ensure that it has not been damaged and is complete. Before installation, please make sure this product is the correct model and you have all the parts required for installation and using.
- Please read these instructions carefully and keep it for future reference.

### Dimensions

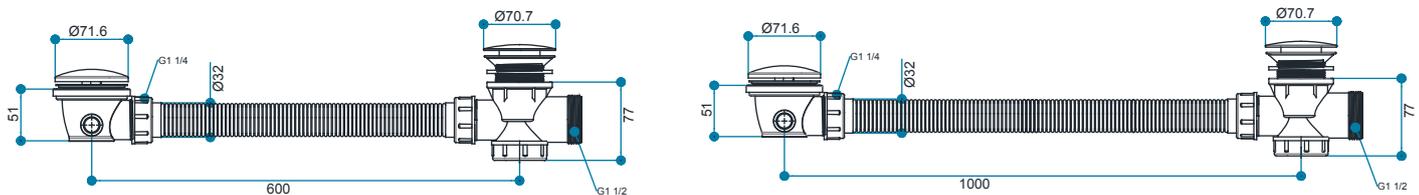

### Installation

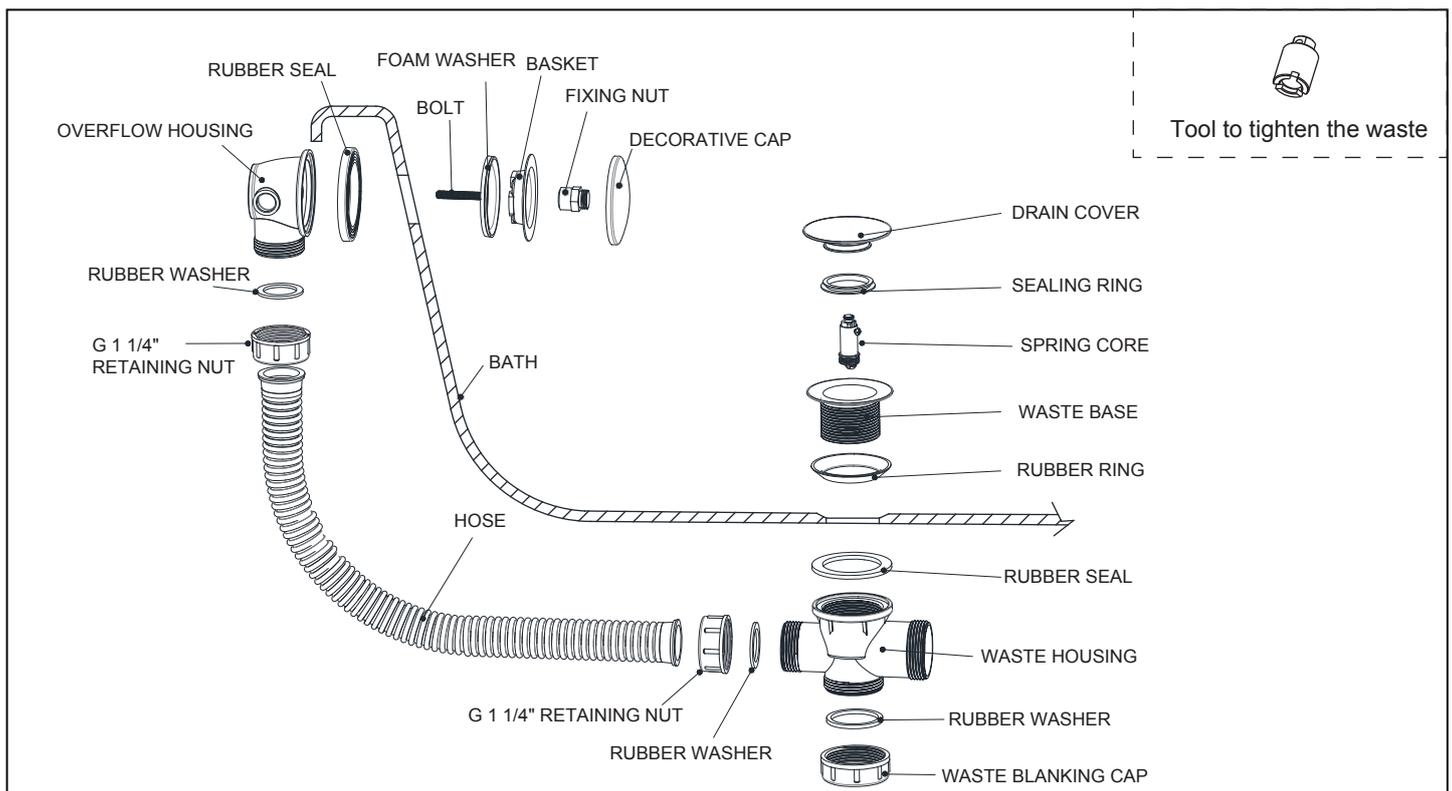

### Installation

1. Fit the rubber seal into overflow housing, then hold this unit in position from the backside of the bath.
2. Screw in the thread bolt and the overflow base. Please ensure it is fully screwed at the body.
3. Screw the cover onto the bolt.
4. Put the waste base and washer into the bottom waste hole of bath. Place the rubber washer and waste housing onto the waste from backside of bath in sequence. Tighten all the above elements together.
5. The waste blanking cap can be fitted onto the horizontal outlet of the waste housing in order to fit a shallow trap or P trap.

### Maintenance

Clean with warm soapy water or a mild detergent. Do not use abrasive or chemical cleaners as these can damage the surfaces and material. Please see our website [www.bathstore.com](http://www.bathstore.com) for any assistance.