


Installing Euro Duo Trio bath panels

Create a frame around the bath using 2" by 2" wooden planks. Attach panels, plinth and corner posts to the frame. The panels are purely for decoration, and not for support of the bath. The panels can be fixed to the frame by small panel pins or decorative screws.

When using in a corner installation, attach the corner post to the floor using "L" shaped brackets at the bottom of the post. Then silicone the top to the underside of the bath.

1700mm by 700mm bath

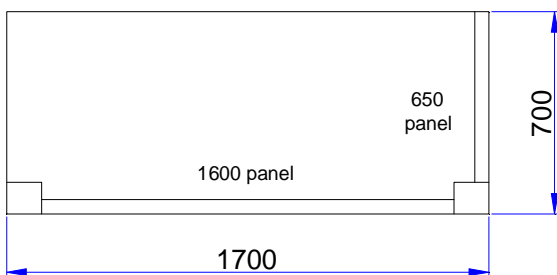


1700 side: Use one 1600mm panel with two corner posts on either end.

700 side: Use a 650mm panel on the short end.

The plinth is used to adjust the height of the panel to the height of the bath. The corner posts need to be cut to fit to the height of the bath. The posts should be cut from the bottom.

IMPORTANT : the cut ends need to be sealed to prevent water ingress and consequent damage.

1700mm by 750mm bath

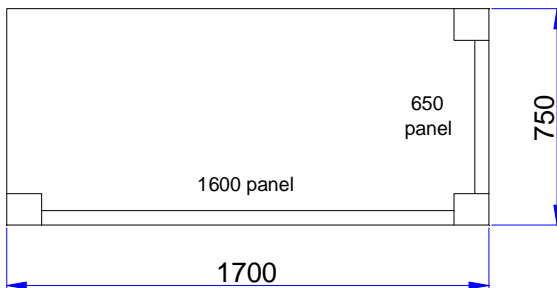


1700 side: Use one 1600mm panel with two corner posts on either end.

750 side: Use a 650mm panel with two corner posts on either end of the 750 side.

The plinth is used to adjust the height of the panel to the height of the bath. The corner posts need to be cut to fit to the height of the bath. The posts should be cut from the bottom.

IMPORTANT : the cut ends need to be sealed to prevent water ingress and consequent damage.

1800mm by 800mm bath

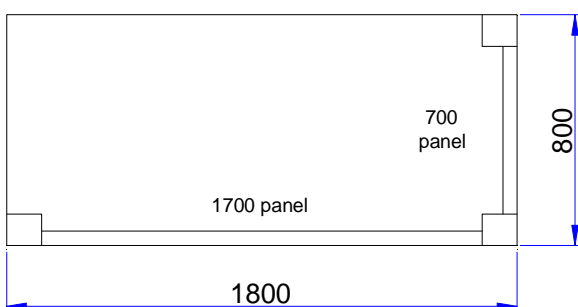

1800 side: Use one 1700mm panel with two corner posts on either end.

800 side: Use a 700mm panel with two corner posts on either end of the 800 side.

The plinth is used to adjust the height of the panel to the height of the bath. The corner posts need to be cut to fit to the height of the bath. The posts should be cut from the bottom.

IMPORTANT : the cut ends need to be sealed to prevent water ingress and consequent damage.

 **When cutting the corner posts, the cut section must be coated with a sealant before installation to prevent water ingress and consequent damage.**