






## Benchmark Quadrant Door Installation Instructions







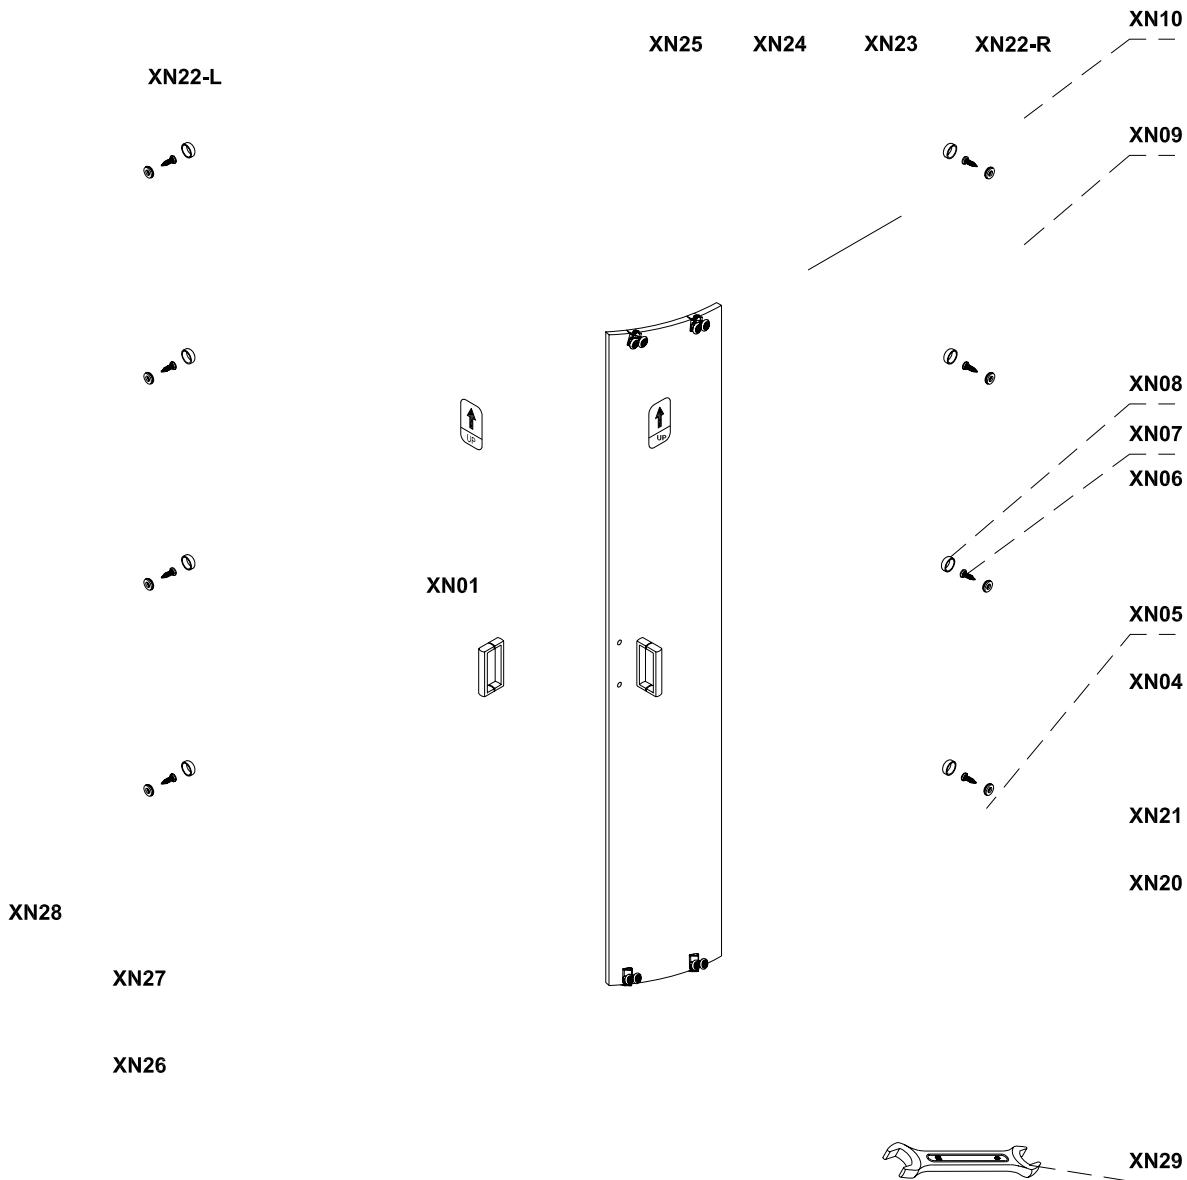









- Prior to installation check that all fittings have been supplied.
- The tray should be installed by a competent person. The tray should be level, the walls should be tiled down to the tray, and the horizontal joint between the tiles and tray must be sealed with silicone sealant to ensure water-tightness.
- Handle with care. Impacts can damage both the glass and the frame.
- Please check for any hidden pipes or cables before drilling holes in the wall.
- The success of the installation and operation is, of course, dependant on the squareness, alignment and construction of the walls to which the enclosure is fixed. If the walls are significantly out of true we recommend dry lining the walls to ensure they are both vertical and at 90 ° to each other.
- The wall fixings supplied may not be suitable for your installation. You may need to source alternatives depending on the construction of the wall you are fixing to.

### Tools Required:





**Parts Supplied:**

XN19	Track	2x	XN08	 Screw cap	8x	XN25	 Magnetic strip	2x
XN20	Fixed panel	2x	XN09	Wall profile	2x	XN26	 Track seal cap	4x
XN21	 ST4 *30 screw	8x	XN10	 Wall profile cap	2x	XN27	Moving door	2x
XN04	 Wall plugs	8x	XN22-L	 Door frame cap LH	1x	XN28	 "U"shape plastic seal	4x
XN05	 ST4 *50 screw	8x	XN22-R	 Door frame cap RH	1x	XN01	 Handle	2x
XN06	 Washer	8x	XN23	 Waterproof strip-1	2x	XN29	 Spanner	1x
XN07	 ST4 *12 screw	8x	XN24	 Waterproof strip-2	2x			

